
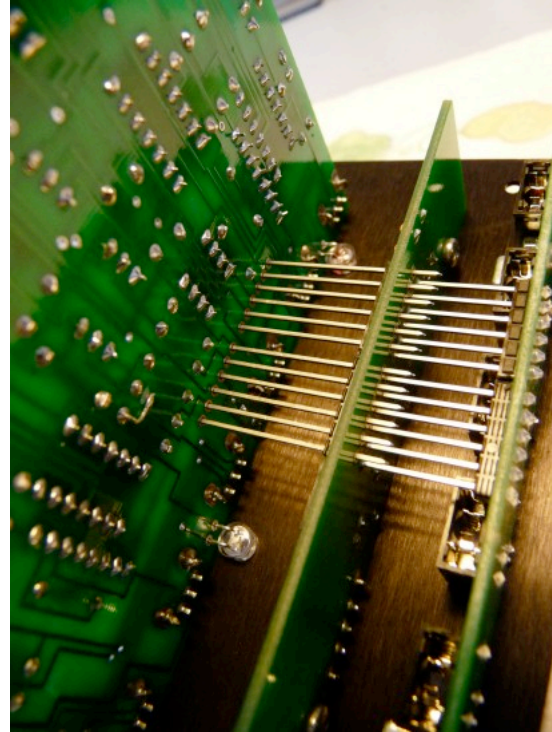


Mount the jack board with the switch into the center position of the front panel. Insert two 6 pin headers into the board, using the row of holes nearest the front panel. Mount the other jack board into the right position. Slide the headers over into the right hand board. Solder and trim.

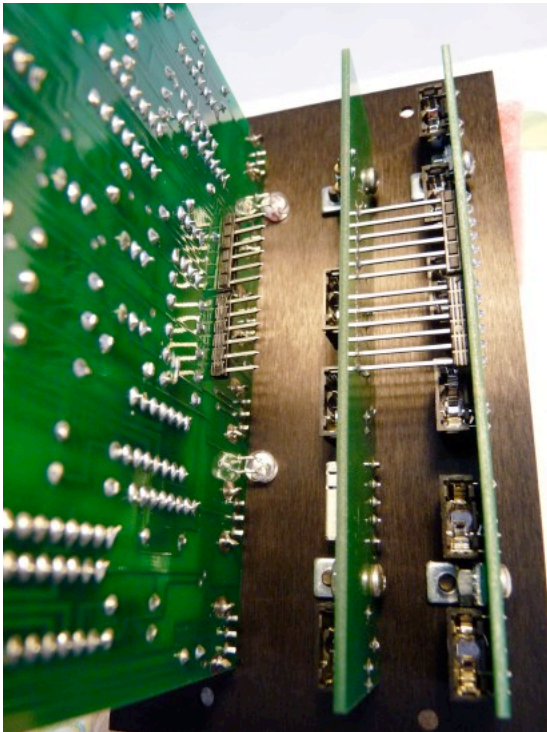

Insert two 6 pin headers into the main board and mount the board into the front panel. Slide the headers over into the jack/switch board and solder. No trimming is necessary. (Photos unclear? Check our web site "Tech" page.)